

Stimulate the Visual Senses

COMBINE THE POWER OF A POWERLINK WITH A HAIR DRYER TO CREATE AN EXCITING VISUAL DISPLAY!



Hair Dryer or Fan



Windsock, streamers, parachute, or any other light weight colorful object



PowerLink & Switch

- 01 Suspend your visual object(s).
- 02 Attach the hairdryer & switch to the Powerlink.
- 03 Position the switch for user access
- 04 Position the hairdryer so that the airflow hits the targets.

- 05 Power on your hairdryer, choose a mode on the Powerlink, hit the switch & watch the show!

Enjoy the Show!

Pro Tip

Change the Powerlink's mode to elicit different skills! Use **Direct Mode** to target cause and effect relationships; applying pressure to the switch turns the fan on, removing pressure causes the fan to turn off. Use **Latch Mode** to target communication skills; in latch mode the first switch hit turns the fan on, the second hit will cause it to turn off. This is a great opportunity to target core words like "stop" and "go". Use **Two Switch Mode** to target bilateral hand use or social skills. Two Switch Mode requires activation from two switches to turn the fan on, a perfect opportunity to work on using both hand together or for two friends to work together for a common goal!